

 


Power Center Connections for Headlight Switch



Details of typical GM headlight switch with dimmer control and dome light switch

(This diagram applies to Coupe-23 Kits only)

© 2013-2014

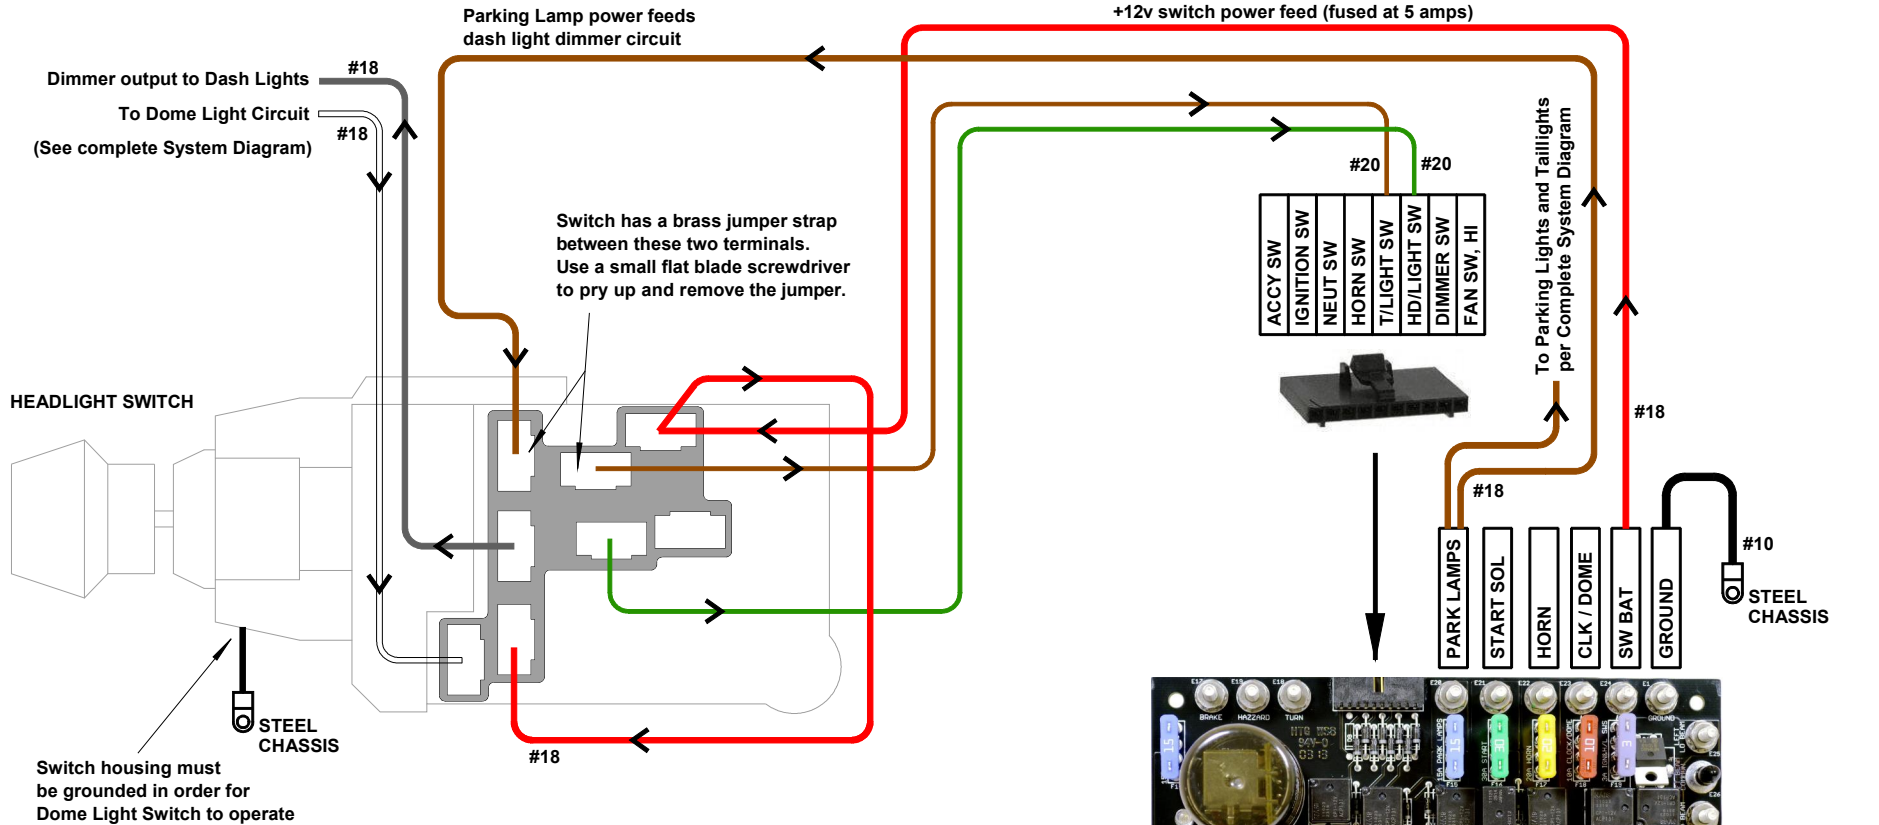

TERMINAL IDENTIFICATION

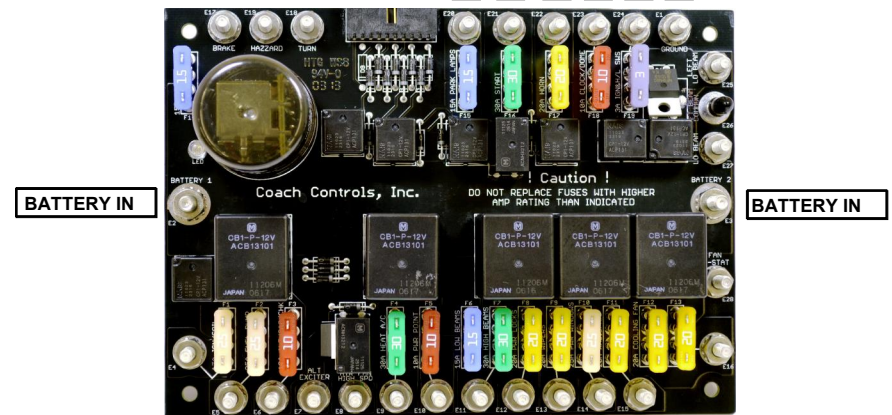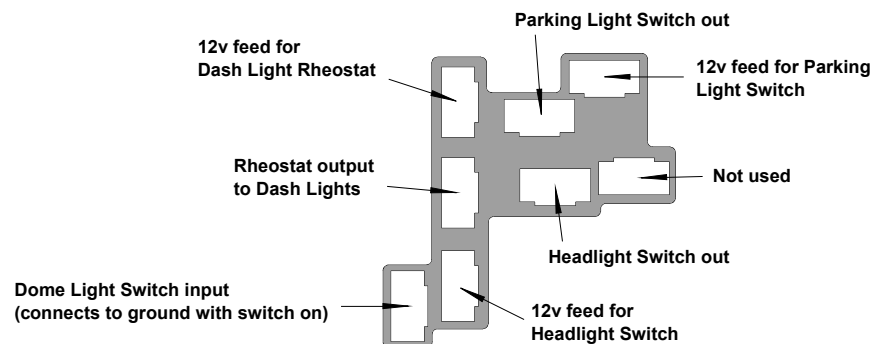  

COUPE-23 POWER CENTER

NOTE: In this configuration the Headlight Switch does not carry any high currents, it simply triggers the Parking Lamp and Headlight relays on the Power Center. Parking Lamp power from the Power Center supplies power to the Headlight Switch dash light dimmer circuit (brass jumper strap removed from the headlight switch).