


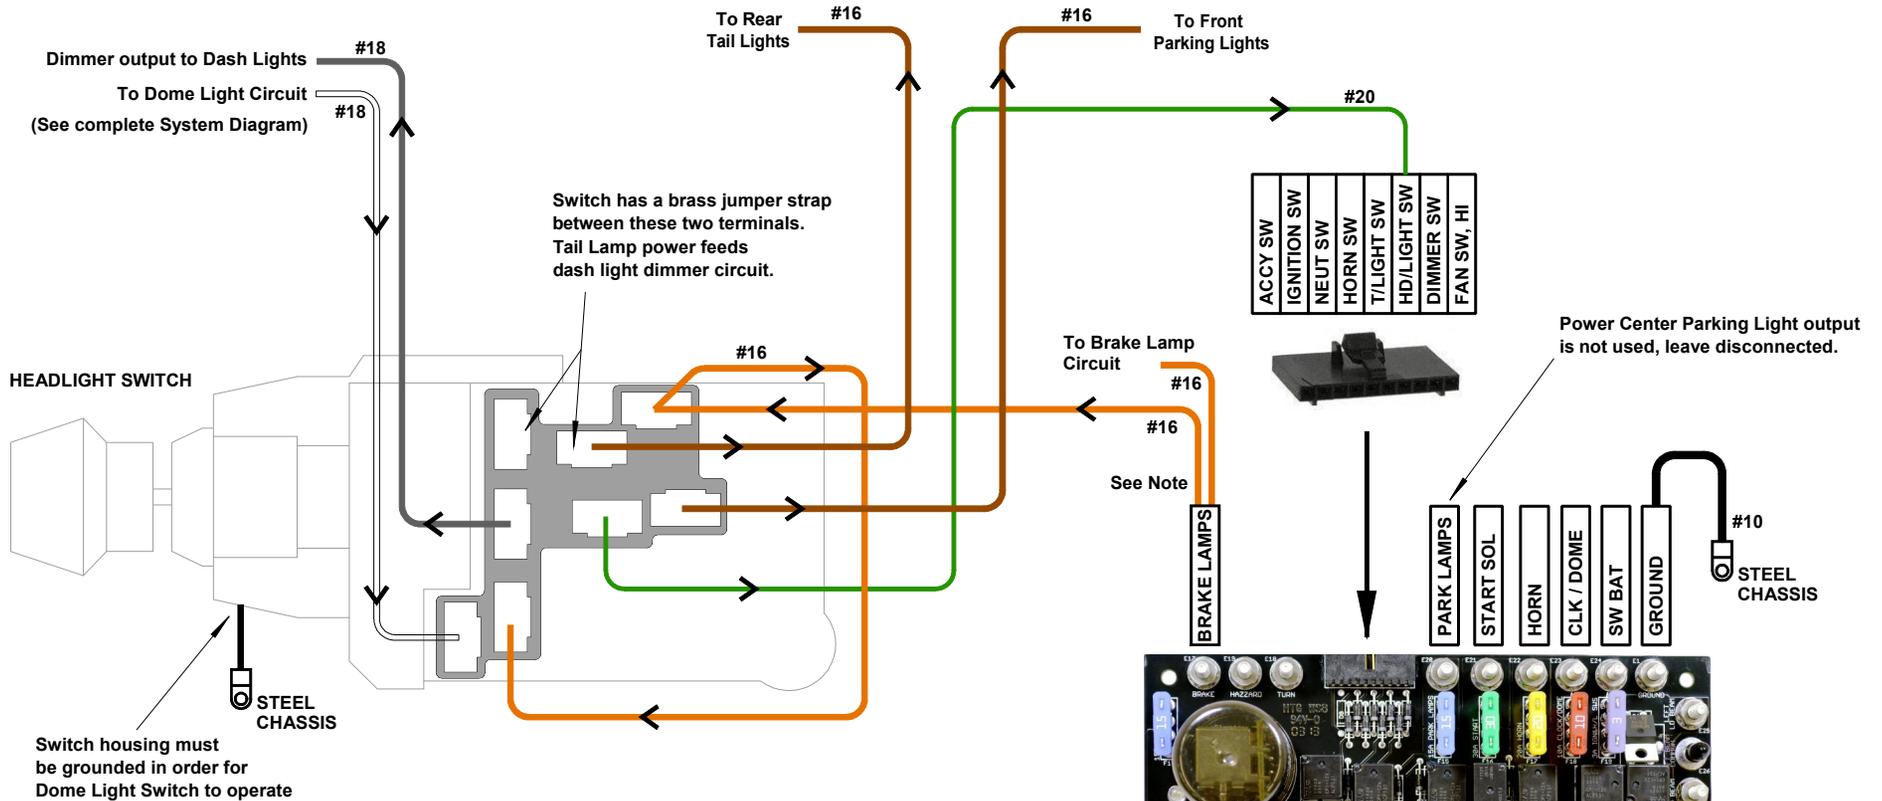



GM Headlight Switch Connections for Front Parking Lights that turn Off with Headlights On

(This diagram applies to Coupe-23 Kits only)

© 2013-2014



TERMINAL IDENTIFICATION

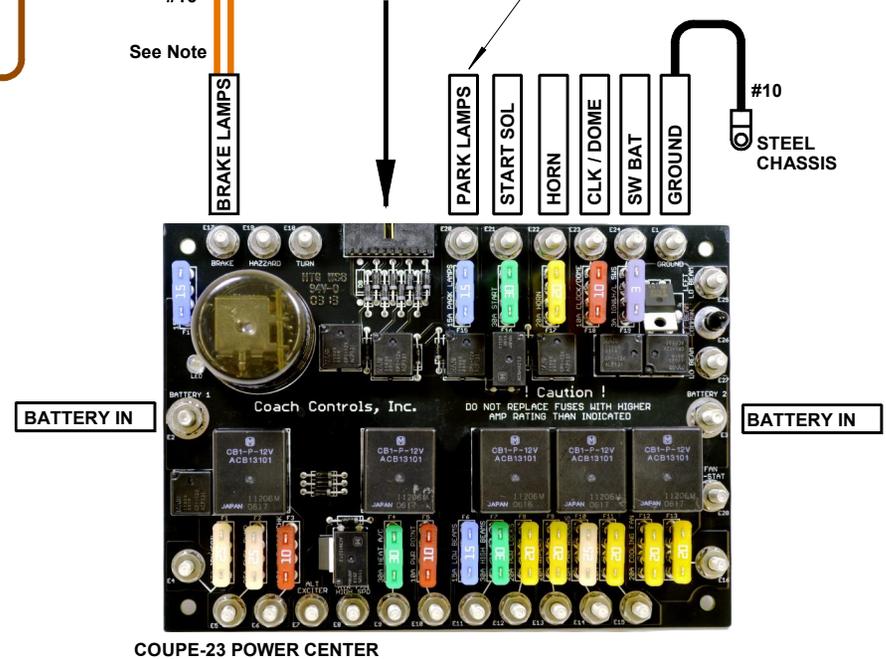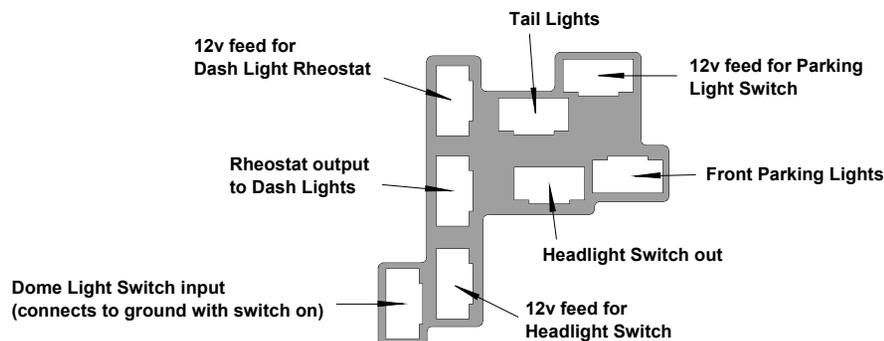

NOTE: In this configuration the Power Center Parking Light output terminal is not used at all. Instead, power from the Brake Switch terminal is used to supply power to the Rear Tail Lights, Front Parking Lights, and Dash Lights, all controlled by the Headlight Switch. The Brake Switch terminal also feeds power to the Brake Light circuit as shown on the complete system diagram.