




# Power Center Connections for Headlight Switch


Details of typical GM headlight switch with dome light switch

© 2016

(This diagram applies to Coach-1 Kits only)

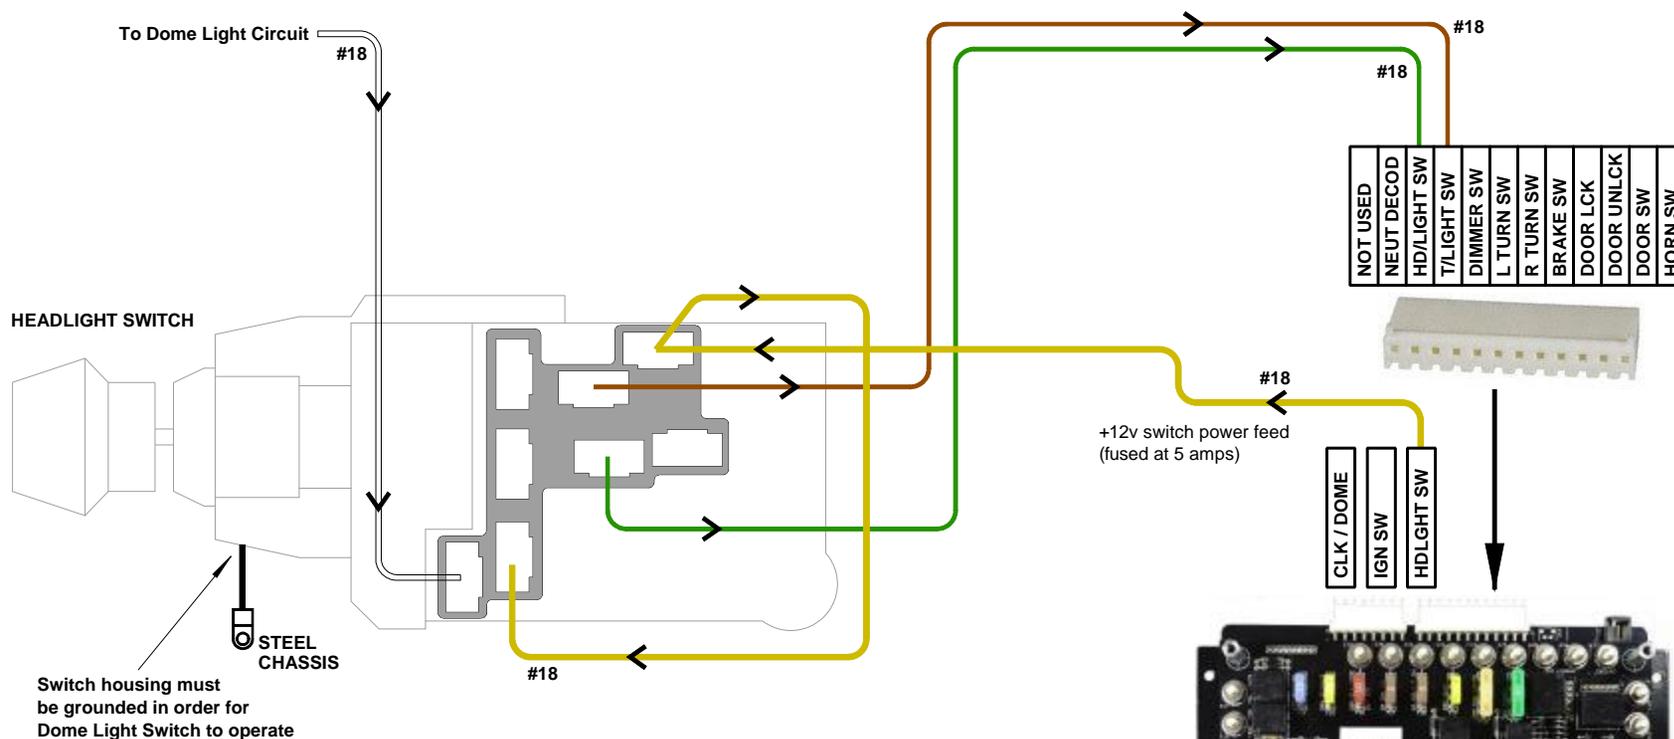

## TERMINAL IDENTIFICATION

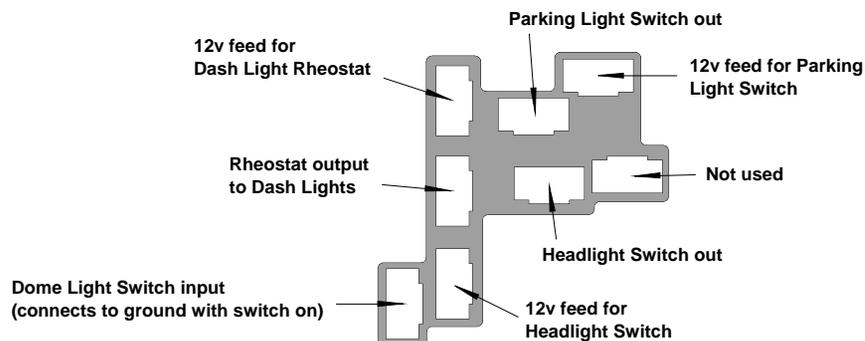

COACH-1 POWER CENTER

NOTE: In this configuration the Headlight Switch does not carry any high currents, it simply triggers the Parking Lamp and Headlight relays on the Power Center.